

Step 1: Open the machine's webpage and click on the System Settings button.

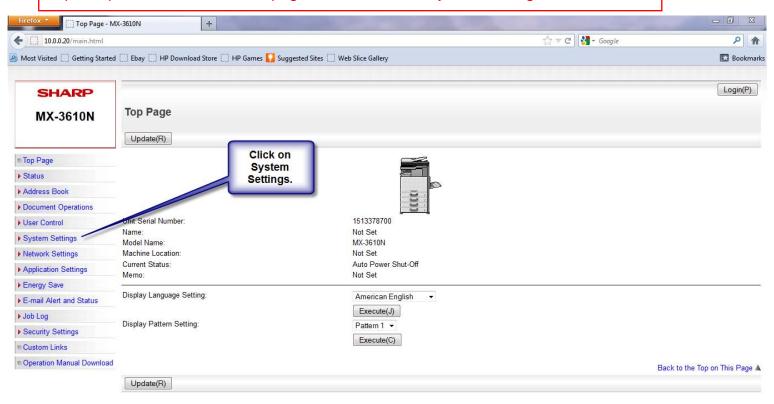

Step 2: Click on the Operation Settings button.

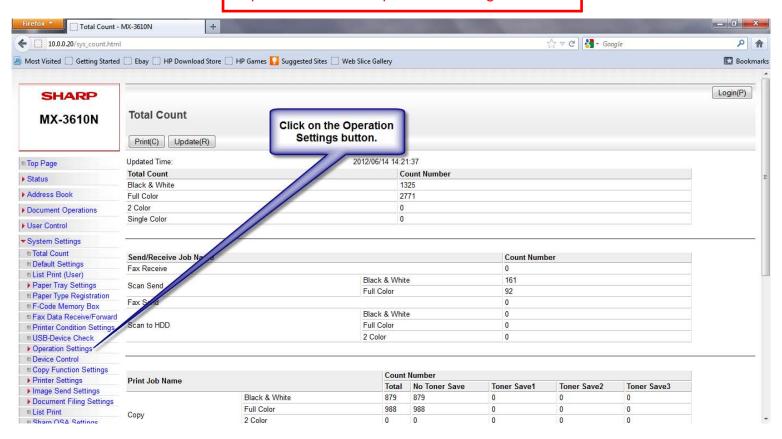


Step 3: Login as the administrator.



Step 4: Scroll down to the Remote Operation Settings section of the page.



Step 5: Set all boxes to Allowed and enter your workstation's IP address.

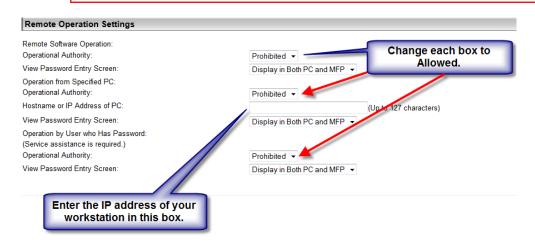

Step 6:Your completed screen should look like this one. Click the Submit button to save your settings.

(Up to 127 characters)


Remote Operation Settings

Remote Software Operation: Operational Authority: Allowed ▼ View Password Entry Screen: Display in Both PC and MFP ▼ Operation from Specified PC: Operational Authority: Allowed **▼** Hostname or IP Address of PC: 10.0.0.124 View Password Entry Screen: Display in Both PC and MFP ▼ Operation by User who Has Password: (Service assistance is required.) Operational Authority: Allowed ▼ View Password Entry Screen: Display in Both PC and MFP ▼


Submit(U) Update(R)


Your screen should look like this when all steps are completed. Click on the Submit

Step7: Open your VNC viewer.

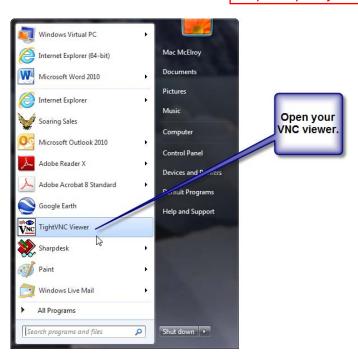

Step 8: Enter the IP address of the Sharp MFP (copier).

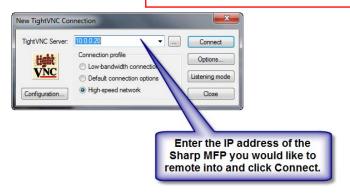

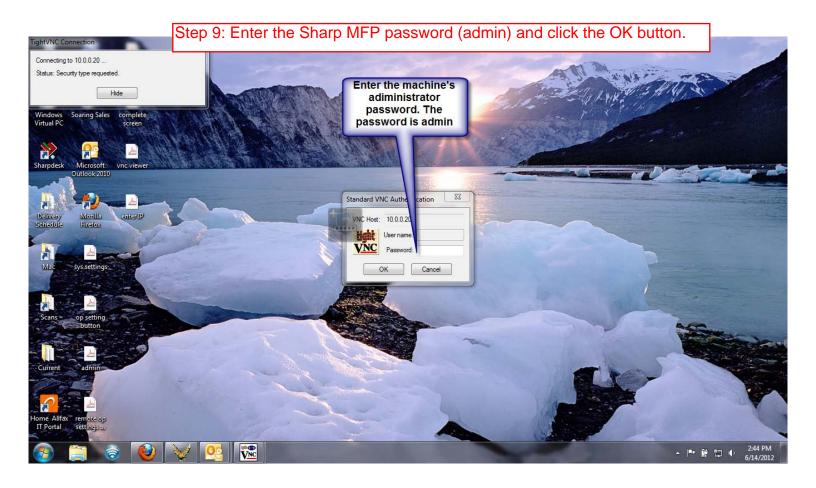

Step 10: The Remote Front Panel tool is now open. You can operate any function on the machine using your mouse at this point.

